



Model 1204 Tuning/Playing Instructions

Thumb Piano





Schoenhut® Piano Company, 6480-B US1 North, Saint Augustine, FL USA
Phone 904-810-1945 Fax 904-823-9213 Email info@toypiano.com Website www.toypiano.com
"Manufacturer of Toy Pianos since 1872"

Tuning Directions

DO NOT loosen the two screws holding the keys. Minor adjustments to pitch can be made by tapping the keys (to raise) or (to lower) pitch.

Playing Directions

To play your thumb piano, lightly depress a key with your thumb (about 1/32 of an inch, or less). With the key still depressed, slide your thumb off the key, letting it snap back.

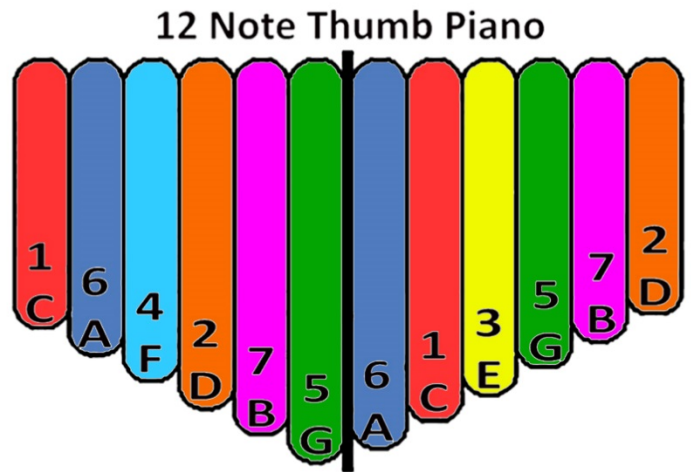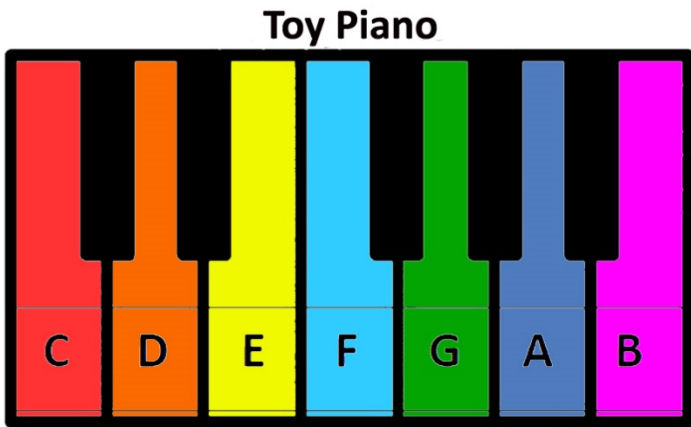

Note: A darkening of the brass tube and oxidation of the keys is normal. It does not affect the playability or tone of the instrument.

Schoenhut® Piano Company, 6480-B US1 North, Saint Augustine, FL USA
Phone 904-810-1945 Fax 904-823-9213 Email info@toypiano.com Website www.toypiano.com
"Manufacturer of Toy Pianos since 1872"