



# Model 6625 Assembly Instructions

## Traditional Spinet



Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
***“Manufacturer of Toy Pianos since 1872”***

## **WARNING!**

This product must be assembled by an adult prior to play. Unassembled parts may have sharp edges which could cause injury. The piano and bench are designed for use by a child. Inspect the hardware periodically for tightness and integrity, tightening or replacing any loose parts.

## **Parts**

Piano Body – fully assembled  
Bench seat  
Bench legs (four)  
Song book and color strip

Barrel nuts (four)  
Machine screws (four)  
Allen wrench

## **Assembly**

### **Alert: Hardware is located inside the Styrofoam packing material**

Step 1: Insert 4 barrel nuts into the side rails on the underside of the bench seat. Important: Use vertical slot on barrel nut as a guide for proper alignment, enabling the screw to thread into it easily.

Step 2: Attach legs to short end of bench with machine screws, lining them up by hand until they thread in easily (Do not force them). Use an Allen wrench or a Phillips screw driver to tighten.

Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email info@toypiano.com Website www.toypiano.com

***“Manufacturer of Toy Pianos since 1872”***

A slight tilt to the piano keys is normal. The loose-pivot design is intentional to provide an easy, light touch for little fingers. Occasionally, keys may jog out of position during shipping. Running your hand lightly both ways across the keyboard, or further by lifting and gently shaking the piano may easily remedy this. The keys will then fall into their proper position.

Fold the color music strip so that it lines up appropriately behind the black keys.

Any questions, call our toll-free number during normal business hours so that a customer service representative may assist you.

In the event of shipping damage, **DO NOT RETURN THE PIANO TO A STORE.** Instead, call our office during normal business hours for a Return Authorization Number (RA#). This RA# is required and must be authorized by Schoenhut Piano Company for return of a product. Credit or replacement will not be issued unless the product is packed properly in its original packaging within the 30-day Manufacturer's Warranty.

Congratulations on your choice of Schoenhut®, leader in the world of toy pianos since 1872. Our musical instruments are designed to develop basic playing skills, while encouraging children on a path to music.

Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
***“Manufacturer of Toy Pianos since 1872”***