

## Replacing Disassembled Keys 30 KEY

## Prior to beginning, please note:

- White Keys may have note letters imprinted to aide you
- Black keys are interchangeable
- 1. Beginning on the Left side of the piano, the first key is "C" and will be notched on the top right side
- 2. A black key is next in the sequence
- 3. The third key is "D" and will be notched on both the top left and top right sides
- 4. A black key is next in the sequence
- 5. The fifth key is "E" and will be notched on the top left side
- 6. The sixth key is "F" and will be notched on the top right side
- 7. A black key is next in the sequence
- 8. The eighth key is "G" and will be notched on both the top left and top right sides
- 9. A black key is next in the sequence
- 10. The tenth key is "A" and will be notched on both the top left and top right sides
- 11. A black key is next in the sequence
- 12. The twelfth key is "B" and will be notched on the top left side
- 13. Repeat steps 1-12 for keys 13-24
- 14. Repeat steps 1-5 for keys 25-29
- 15. The last key in the sequence is "X." The "X" key is solid on all sides and does not have any notches

